

TO BE PERFORMED BY QUALIFIED PERSONNEL

To install: Hook the tabs (A) under the rear shoulder screws. Then lower until the open slots go down onto the front shoulder screws (B).

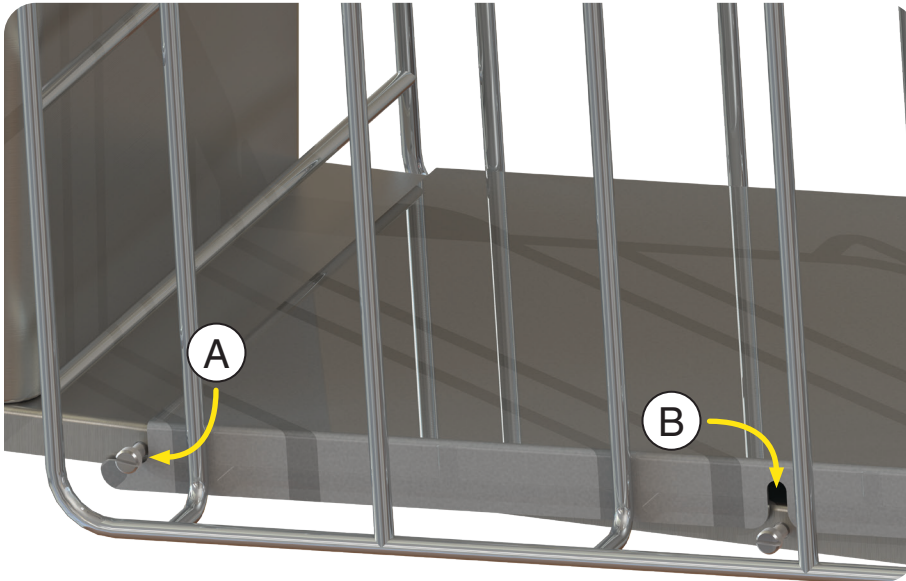


FIG 1



FIG 2

The booster may be used in either of two positions, one for low profile servers (FIG 2), the other for taller servers (FIG 3).



FIG 3

Bunn-O-Matic Corporation
Post Office Box 3227, Springfield, Illinois 62708-3227
Phone (217) 529-6601 | Fax (217) 529-6644