

Changing Bags and Priming the Brewer

The brewer will ONLY need to be primed if the machine goes into the lockout mode.

If the Bag in Box (BIB) is replaced immediately when warned, you will not have to prime the machine. Priming the machine leads to unnecessary waste and could impact service if product is not ready when the customer orders it.

Action

Station Guide

Check Product

- You should have two BIBs installed at all times.
- Install BIB with spout down.
- If one of the BIBs is empty, the following warning will display on the screen. Replace the empty BIB immediately.



- If it's not replaced, the brewer will go into a lock out mode after 8 brew cycles.



The DOTS represent the Number of Brews Remaining Until You Will Be **Locked Out**

- If the machine locks out, the screen will display the message: “!!REPLACE BIB NOW!” You will not be able to brew more sweet tea until the BIB is replaced and the brewer is primed as noted below.

Prime Brewer

- Lockout Mode**
 - Prime brewer only if the brewer goes into the lockout mode.
- Replace**
 - Replace empty BIB.
- Place Container** under the nozzle
 - Place an empty container large enough to hold 30 oz of liquid under the dilution/mixing nozzle (30oz cold cup).
 - The sweetener may splatter during priming. Hold the cup as close to the nozzle as possible.
- Press**
 - Hold down the hidden button on the brewer for 5 seconds. Screen should read “PRIME SWEETPUMPS.”
 - Choose “YES.”
- Prime Brewer**
 - Sweetener will start to flow from the nozzle and show a 20 second countdown timer.
- Check Screen**
 - When priming is complete the screen will display “Ready to Brew.”
- Discard the sweetener**

Priming Tea Brewer

- 1 Lockout Mode** (modo "lockout")
 prime only when machine goes into lockout mode
 replace empty BIB
- 2 Replace** (Cambiar)
 replace empty BIB
 cambia el BIB vacío
- 3 Place Container** (Poner el vaso)
 place large cold cup under mixing nozzle
 pon un vaso grande para bebida fría debajo de la boquilla de mezcla
- 4 Press** (Oprimir)
 hold hidden button until screen reads PRIME SWEET PUMP, choose YES
 oprime el botón oculto hasta que la pantalla diga PRIME SWEET PUMP, selecciona YES
- 5 Prime Brewer** (Purgar la máquina)
 seconds remaining
 faltan X segundos
- 6 Check Screen** (Revisar la pantalla)
 when priming is complete screen reads READY TO BREW
 cuando termina la purga, la pantalla dice READY TO BREW
- 7 Discard Sweetener** (Desechar el líquido con azúcar)