

**Why** To ensure coffee quality and crew safety

**Time required** 5 minutes to prepare 5 minutes to complete

**Time of day** At close For 24-hour restaurants: during low-volume periods

**Hazard icons**  Chemicals  Electricity  Hot Liquids/Steam  Hot Surfaces  Manual Handling

## Tools and Supplies



Bucket, clean and sanitized towels



Bucket, soiled towels



Delimiting Tool



Kay® Peroxide Multi-Surface Cleaner Solution



Scrub Brush

## Procedure

### Delime

 **CAUTION:** Surfaces/liquids may be hot.

1. Remove and wash brew basket with SolidSense APSC dispenser using the provided brush.
2. Rinse brew basket with hot water and place in SolidSense Sanitizer solution for 1 minute.
3. Remove brew basket from sanitizer solution, rinse sanitizer out completely, invert and allow to air dry.
4. Remove sprayhead from brewer.



5. Insert long end of the delimiting tool into the sprayhead fitting, and rotate several times to remove any mineral deposits.
6. Insert short end of the delimiting tool into the vent openings, and rotate several times to remove any mineral deposits.




## Delime and clean surfaces (continued)

### Procedure

#### Delime (continued)

- Disassemble the sprayheads by removing black seal around edge.

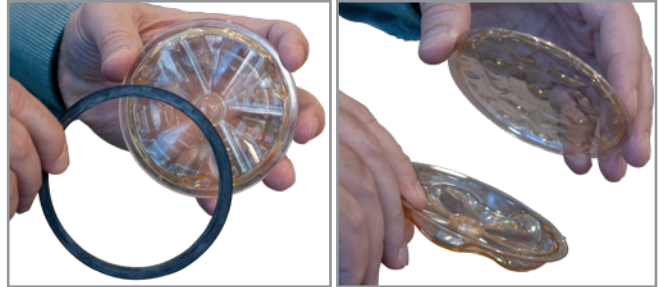

- Wash, rinse and sanitize sprayhead parts in the 3-compartment sink.



**NOTE:** The sprayhead holes must always remain open. Any buildup on the sprayhead and fitting may restrict water flow, and impact your coffee brewing. Upon visual inspection, it may appear that light passes through all holes in the sprayhead, but a thin film of residue can pass light and still impede water flow.

- Use a clean, sanitizer-soaked towel sprayed with Kay® Peroxide Multi-Surface Cleaner Solution to wipe the area where the sprayhead was removed.



- Reassemble clean sprayhead and reattach.

**NOTE:** Sprayheads only need to be hand tightened.



- Replace brew basket.



#### Clean Exterior Surfaces

Spray a clean, sanitizer-soaked towel with Kay® Peroxide Multi-Surface Cleaner solution, and wipe all exterior surfaces.

**DO NOT** clean this equipment with a high-pressure sprayer.

